

# Periodic Maintenance & Lubrication Chart



Sr. No.	Operation	Servicing	RECOMMENDED FREQUENCY							Remarks
			1st	2nd	3rd	4th	5th	6th	7th	
			500 750	4500 5000	9500 10000	14500 15000	19500 20000	24500 25000	29500 30000	
1	Clean the vehicle with water wash & dry completely		✓	✓	✓	✓	✓	✓	✓	Ensure to prevent water entry in Petrol tank, Silencer & electrical parts. Use caustic free detergent for washing.
2	Engine oil & engine oil filter*	C,R	R	R	R	R	R	R	R	<b>SAE 20W50 "API SJ" Grade</b> Replace at every 5000kms. And top-up at every 2500 Kms (If required)..
3	Oil strainer	CL	CL		CL		CL		CL	Oil strainer cleaning at the time of oil change.
4	Spark plug	CL,C,R					CL,A		R	
5	Air cleaner element*** & cover 'O' ring	R				R			R	
6	In line Paper filter or Fuel Cock paper filter	R				R			R	
7	Fuel cock sediment bowl cleaning	CL				CL			CL	
8	Carburetor rubber duct	C,R						C,R		
9	Fuel pipe	C,R	C	C	C	R	C	C	R	
10	Valve tappet clearance	C,A				C,A			C,A	

# Periodic Maintenance & Lubrication Chart



Sr. No.	Operation	Servicing	RECOMMENDED FREQUENCY							Remarks
			1st	2nd	3rd	4th	5th	6th	7th	
			500 750 Kms	4500 5000 Kms	9500 10000 Kms	14500 15000 Kms	19500 20000 Kms	24500 25000 Kms	29500 30000 Kms	
11	Sealed drive chain cleaning & lubrication	CL,L,A	CL,L A	CL,L A	CL,L A	CL,L A	CL,L A	CL,L A	CL,L A	(Customer to apply OKS chain lube spray at every 500 kms)
12	Engine air breather tube	C,R				C,R			C,R	Check & replace if required
13	Brake cam & brake pedal pivot pin	C,L,R	C	C,L,R	C,L,R	C,L,R	C,L,R	C,L,R	C,L,R	Use recommended AP grease.
14	Brake lining or pad -Check wear indicator	C,R	C,R	C,R	C,R	R	C,R	C,R	R	Replace brake shoes /brake pad at every15000 Kms
15	Brake fluid level **- top up / replace	C,A,R				C,A			R	Use recommended brake fluid (DOT3/DOT4).
16	Disc brake assly -- Check functionality, leakage or any other damage.	C			C		C		C	Replace if damaged
17	All cables & rear brake pedal -free play	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A	
18	Wiring harness & Battery connections- routing, tie bands & clamps tightness.	C,A,T	C,A,T	C,A,T	C,A,T	C,A,T	C,A,T	C,A,T	C,A,T	
19	Ignition switch barrel cleaning & handle bar control switches contacts cleaning,	C,CL	C,CL	C,CL	C,CL	C,CL	C,CL	C,CL	C,CL	Use recommended WD40 spray

# Periodic Maintenance & Lubrication Chart



Sr. No.	Operation	Servicing	RECOMMENDED FREQUENCY							Remarks	
			1st	2nd	3rd	4th	5th	6th	7th		
			500 750 Kms	4500 5000 Kms	9500 10000 Kms	14500 15000 Kms	19500 20000 Kms	24500 25000 Kms	29500 30000 Kms		
20	Steering play	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A		
21	Steering stem bearing*** & Cap steering bearing(Plastic)**	C,CL L,R			C,CL L,R			C,CL L,R		C,CL L,R	Check & replace if damaged. Use HP Lithon RR3 grease for lubrication.
22	Main stand & side stand pin**	CL,L			CL,L			CL,L		CL,L	Use recommended AP grease.
23	All fasteners tightness	C,T	C,T	C,T	C,T	C,T	C,T	C,T	C,T	C,T	
24	Engine foundation silent bushes **	C				C				C	
25	General lubrication-Clutch lever, front brake lever.	L	L	L	L	L	L	L	L	L	Use recommended AP grease.
26	Idle speed / CO%	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A	
27	Coolant level in expansion tank	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A	Use recommended 'Ready to use coolant'.
28	Coolant hose damage/clamps/leakage	C		C	C	C	C	C	C	C	

# Periodic Maintenance & Lubrication Chart



Sr. No.	Operation	Servicing	RECOMMENDED FREQUENCY							Remarks
			1st	2nd	3rd	4th	5th	6th	7th	
			500	4500	9500	14500	19500	24500	29500	
		Kms	750	5000	10000	15000	20000	25000	30000	
29	Radiator fins	C,T	C,T	C,T	C,T	C,T	C,T	C,T	C,T	

\* It is strongly recommended to use specified grade only , In case of any other engine oil of same specifications is used the frequency would be every 5000 kms

\*\* As applicable to model

\*\*\* More frequent cleaning is required while driving in dusty environment.

**C : Check, A : Adjust, CL : Clean, R : Replace, T : Tighten, L : Lubricate**

**Note:** periodic parts / lubricants as per periodic maintenance & chart are mandatory & the same is chargeable to customer.